

• The power supply must be used indoor only. This product. Liquids can cause a failure and/or a fire hazard. products, use care not to spill liquids into any part of the placed on or near the product. As with any electronic objects filled with liquids, such as vases, shall not be bne , prink and or sping or splashing , and expose this product to rain or moisture. The product To reduce the risk of fire or electric shock, do not

WARNINGS AND CAUTONS

overloading wall outlets and extension cords. 10. To prevent risk of fire or electric shock, avoid dangerous voltages or other hazards.

Ορευιης οτ removing covers may expose you to

dropped. Do not attempt to service this product yourself. moisture, does not operate normally, or has been

into the system; the system has been exposed to rain or is damaged; liquid has been spilled or objects have fallen qewedeq in any way such as: power supply cord or plug pervicing is required when the system has been 9. Refer all servicing to qualified service personnel.

product. unused for long periods of time to prevent damage to the

8. Unplug this device during lightning storms or when rom the device.

pinched, particularly close to the plugs or where they exit 7. Protect the power cord from being walked on or

6. Only use accessories specified by the manufacturer.

(including amplifiers) that produce heat.

radiators, heat registers, stoves, or other appliances 5. Do not install near any heat sources, such as

.eninesio

4. Clean only with a dry cloth. Turn off this product before .90106.

3. Heed all warnings on the product and in the owner's 2. Keep these instructions for future reference. J. Read these instructions before using the product.

IMPORTANT SAFETY INSTRUCTIONS

sieoa uo system is neither designed nor tested to use outdoor or

.770 enrut bel euters oft

·/iddns

ILGEZE)

3. System freeze:

conuce is braying.

the device volume is up.

closer to the speaker.

TROUBLESHOOTING

COMPATIBILITY

.1940 T.1 and Android 4.4.2 and higher.

Bluetooth Low Energy (BLE) technology,

:punos oN .2

turns red; push again the reset button with a nail until

Push the reset button with a nail until the status led

• Unplug and plug again CRAMOAD nises guid bis purger

Reset the system: see the next paragraph ["3. System

cordless phones. In case of malfunctioning turn them off.

electromagnetic interference. Examples: other Bluetooth

Make sure your Bluetooth device and/or the speaker is

• Make sure your Bluetooth device is playing audio, and

• Your Bluetooth device may be out of range, try moving it

CROMDATICA is compatible with all devices that support

applied these modifications are at your own risk.

system performance, and will void the warranty. When

may compromise safety, regulatory compliance, and

• The modifications that you might make of this product

devices, microwave ovens, wireless network routers, or

• Turn the system volume up and ensure the audio

• Make sure the system is powered.

set away from other devices that generate

1. If the bluetooth connectivity doesn't work:

User Manual

Habits will refund a reasonable freight expense. return of the product. If the claim is justified Digital The Client must pay for the freight and arrange for the

replace is solely at the discretion of Digital Habits. it free of charge to the Client. The decision to repair or manufacturing fault, Digital Habits will repair or replace It Digital Habits determines that the product has a

agreement in writing from the reseller or Digital Habits. Habits without a receipt or proof of purchase and a prior No products may be returned to the reseller or Digital

Client Service at: careddigitalhabits.it. under the warranty period please contact your reseller or If the purchased product presents a maltunctioning

.diusuewslow pue leilaiem two years from the date of purchase against detects in fo ynernew e sver eroud atide Habita Digita i warranty of Digital Habits wants all Clients to receive high quality

YTNAAAAW

Enjoy life at the rhythm of 16 million colors!

manufacturing techniques and custom production. and habits, blending innovative experiences, digital goods and define new approaches to common objects manufacturing to modern innovations of contemporary Our ambition is to bring the quality of italian design and

is the first experiment in a consumer product allowing perfect integration between light, sound and gestures. It lamp and speaker, controlled through gestural interface

users to program the mixing of light and sound effects.

and remotely through an app. CROMATICA makes Congratulations for choosing CROMADA - AND A Congrature desk

ΤΗΑΝΚ YOU FOR YOUR PURCHASE

CROMATICA

i his product is Made in Italy. trademarks of Digital Habits.

CROMATICA and the CROMATICA design are registered

.fi.etideAletigibbleneo For questions contact us by e-mail at:

CUSTOMER SERVICE

eN c.f :tdpisw tsN Product size: 300 x 107 x 70 mm SYSTEM SIZE AND WEIGHT:

A E , JJ V CC , 3 A ,zH 06/02 , V 042 - 001 :tuqn

POWER SUPPLY:

RECHARGING USB PORT: 5V 1.2A

Response frequency : 85 Hz to 20 kHz W UE noiteoitiJqmA ATAD OIDUA :Bluetooth 4.0 full range speaker


16 MLN Colors RGB LED

FIGHT : WHITE LED source, 250 lm, 1800-8000K,

TECHNICAL SPECIFICATIONS

damage to the product or boxes during transport. ensure the product safety and be insured to cover for any the reseller or Digital Habits warehouse. The Client must The product is the Client responsibility until it reaches

O3J sutst2

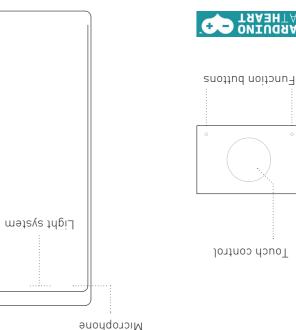

DIGITALHABITS


CROMATICA

ON / OFF

Once plugged to the power supply CROMATICA is ΟN When unused CROMATICA goes in stand-by mode.

CROMATICA is OFF only when unplugged from the power supply.



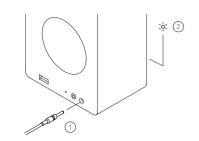

1. Unbox CROMATICA and plug it to the power supply 2. Connect your phone or tablet to CROMATICA and the status led turns BLUE.

STATUS LED FEEDBACKS

BLUE	App connected
RED	Programming

The box contains: 1 CROMATICA lamp 1 CROMATICA power supply (note: use cromatica only with the provided power supply)

AUDIO


Before you can play music CROMATICA needs to be paired to a device. CROMATICA can be paired to a Bluetooth device (phone or tablet) or to another CROMATICA.

PAIR A DEVICE TO CROMATICA

1. When CROMATICA is turned ON, it's always discoverable and free to pair with any device. 2. Set your Bluetooth device to discoverable mode so it can detect the CROMATICA speaker. Locate the Bluetooth systems list in your device. 3. From the Bluetooth systems list, select the CROMATICA speaker.

4. If your Bluetooth device prompts you for a passcode, enter digits 0000 (4 zeros) and press OK. Some devices also ask you to accept the connection. Your Bluetooth device indicates when the pairing is complete.

PAIR TWO CROMATICA TOGETHER

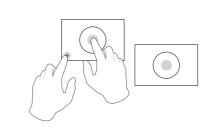

1.PREPARE

a) Make sure the two CROMATICA you wants to pair are powered on and close to each other.

b) Reset the two CROMATICA: for each CROMATICA. push the reset button with a nail until the light turns RED, push again until the light turns OFF. Unplug and replug CROMATICA from the power supply.

c) Remove CROMATICA from the list of associated bluetooth devices on your phone or tablet.

2. AUDIO PAIR

a) Hold together the central and the left function buttons (see image) until CROMATICA generates a double beep audio signal. The pairing will be automatic. When CROMATICA is paired it generates a second double beep audio signal. If the pairing fails the beep will only be one and steady. On failure repeat the procedure from step 1.

b) Once paired the two CROMATICA remain associated. Follow the instructions as shown in "PAIR A DEVICE TO CROMATICA"

3.UNPAIR

a) If you want to remove the STEREO pairing, for each CROMATICA, push the reset button with a nail until the light turns RED; push again until the light turns OFF. Unplug and replug each CROMATICA from the power supply.

b) Remove CROMATICA from the list of associated bluetooth devices on your phone or tablet.


CROMATICA APP

The mobile App allows to control the CROMATICA light with a wireless device (smartphones or tablet).

APP DOWNLOAD

Download and install the CROMATICA Mobile App from the App Store or Google Play (i.e. search for the keyword "CROMATICA").

The CROMATICA App is compatible with all devices that support Bluetooth Low Energy (BLE) Technology: iOS 7.1 and Android 4.4.2 or higher versions

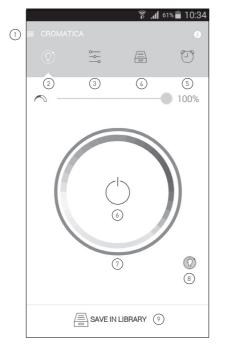

MENU ITEMS:

1) Connection panel: allows to select and connect to one or more CROMATICA

2) Light Control: controls light settings such as, ON/OFF, white light tone, light color and light intensity.

3) Light configurator: gives the possibility to create custom light effects and save them in the library.

4) Light Effect Library: gives access to a pre-defined list of effects or to the effects you saved on the library.

5) Alarm (android only) : sets the alarm clock with your preferred sound & light effects.

CONTROLS:

6) ON/OFF Button: turns the white or color light ON/OFF

7) Light Color Wheel: tunes the right color or tone of white light.


8] White/Color Light Switch: switches from white light to color light and vice versa.

9) Save Light in Library: save your favorite light scenario in the effect library.

LIGHT

CROMATICA comes with two lighting systems: a tunable white light system and a color RGB system.


ON-OFF LIGHT / INTENSITY

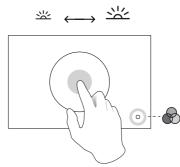

Touch one time the center of the touch pad to turn the light on or off.

Hold the center of the touch pad to change the light intensity. Hold the right function button to activate a color service light particularly useful at night.



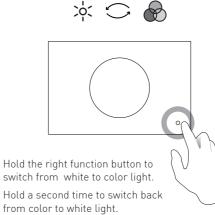

CHANGE THE LIGHT COLOR
When in color mode, hold t function button to change


light color; when in white light mode, hold the left function button to change the tone of white light (i.e. cold &warm light)

DIGITALHABITS


CONNECTORS

A set of connectors are available at the bottom of CROMATICA to allow to recharge batteries of an external device, connect an audio source or reprogram CROMATICA.


EXTERNAL DEVICE RECHARGE

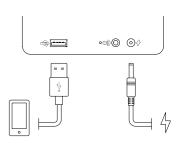

Connect your device (phone or tablet) via the USB port to recharge it.

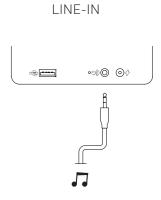

Use the line-in to connect your music player, game console or TV set to CROMATICA.

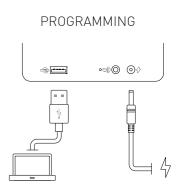

CROMATICA must be connected to the power to be reprogrammed.

To upgrade to the latest firmware version follow the instructions at: www.digitalhabits.it/download.



the left the